




Universal Power Adapter Compatibility Guide

Guide de compatibilité Guía de compatibilidad


 

			
Acer	Travelmate: 230, 280, 660, 800, TM230X, TM230XC, TM230XV, TM233LC, TM233X, TM233XV, TM233XV-PRO, TM233XVI, TM234LCI, TM281XC, TM281XV, TM283LC, TM283LCI, TM653LCI, TM661LCI, TM662LMI, TM800LCI, TM800XCI, TM802LCI, TM803LCI	19	A
	Travelmate: C100, C110, TMC100, TMC110	20	A
	Travelmate: 290, C300, C301, C302, C303, 6000, 8000	19	A
	Aspire: 1680	19	K
	Aspire: 1691wlmi, 3502wlci	19	B
	AOpen: S1	19	K
Apple	PowerBook: G4 (Titanium & Aluminum) iBook: G3 (Dual USB, 500 MHz & up) & G4	20	P
Averatec	1000, C3500	19	B
Compaq	Armada: 110, E500, E700, M300, M700, V300	19	H
	Armada: 100, 1100 – 1130, 4100 – 4131, 4220	18	A
	EVO: 110, 150, 200 – 800, N610C	19	H
	EVO: 115, 160, 180	19	B
	LTE: 5000 – 6000	18	A
	Presario: 720, 700 – 955, 1010 – 1080, 1200 – 1280, 1450, 1600 – 1830, 2700 – 2720, V2403NR, V2414NR, V2424NR	19	B
	Presario: M2105US	19	K
	Presario: V2310, V2335, V4135US	19	H
Presario: 305, 306, 2800 – 2880	19	H	
Dell	Inspiron: 3000 – 3500, 7000	19	B
	Inspiron: 300M, 500M, 600M, 700M, 1000, 1150, 5150, 8500, 9100, XPS	19	I*
	Latitude: D400, D500, D600, X300	19	I*
Fujitsu	Celsius: Mobile H	19	E
	Lifebook: E2010, E7000	19	E
	Lifebook: B2630, B3000D, B3010D, P1120, P2120, P5000, P5010, P5020, S2000, S2010, S2020, S6120, S6120D, S7000/S7010, T3000, T3000D, T3010	16	E
	Lifebook: A1010, C2210, C2220, E4010, E4010D, E7000, E7010, E7110	19	B
	Lifebook: N3500	19	K
	Stylistic Tablet: LTP600, ST3500, ST4000, ST4000P, ST4120, ST4121	16	E
Gateway	Solo: 1100, 1150, 1200, 1450, 5150 – 5350; 400s, 400sp, 400 sp plus, M275R	19	A
	Solo: 2500, 9100, 9150; 6525GP, MX3560	19	B
	360 Notebook: 6023GP, MX6025, MX6124	19	B
	Platinum: MX6650 4000+: MX7515	19	E
200s, 200x, 200xl, 400x, 400xl, 450x	19	E	
Hewlett-Packard	Business Notebook: nc6000	19	H
	Omnibook: 500, 900, 2100 – 4150, 6000 – 7150, xe2 – xe4500	19	B
	Pavilion: dc4150, dv1331, dv1411, dv1420, dv4250, dv4275, ze2315	19	K
	Pavilion: DV1227, DV4000, ZE2115US	19	K
	Pavilion: zt3000 Tablet PC: TC1000, TC1100	18	H
IBM	Thinkpad: A, R, T, X Series (except all 60 Series models)	16	B
	Thinkpad: R, T, X, Z 60 Series	19	M
Panasonic	Toughbook: CF-50, CF-73, CF-WZ, PDRC 34, R1, T1 + T2, TB18, TB28, TB50	16	B
	Toughbook: CF17 – CF72 Series	16	E
Sony	Vaio: PCG TR1A, PCG TR1AP, PCG TR2A, PCG Z1R1AP1, PCG Z1R1AP2, PCG Z1R1AP3, PCG Z1RA, PCG Z1A1, PCG Z1A1P2, Z1A1P3, PCG Z1A1P3/VGN-TX650P/B, V505BX/V505AX	16	E
	Vaio: fs Series, VGN-FS640, VGN-FS660, VGN-FS680/W, VGN-FS740/W, VGN-FS760/W, VGN-FS780/W, VGN-S460, VGN-S460P	19	E



*For the most up to date compatibility information, please visit mobilecomputing.apc.com. Receive a free "I" tip for Dell Notebooks. Limit 1 free tip per customer.



FREE!

*Pour obtenir l'information la plus récente, allez à mobilecomputing.apc.com. Recevez gratuitement une fiche « I » pour les ordinateurs portatifs Dell. Limite d'une fiche gratuite par client.

*Para obtener la información más actualizada sobre compatibilidad, visite el sitio web mobilecomputing.apc.com. Reciba un enchufe adaptador "I" gratuito para computadoras Notebook de Dell (límite: 1 enchufe adaptador gratuito por cliente).

		 	
Toshiba	Libretto: S400, U105 Portege: 3500, 3505, M100, M200, R205 – S2062 Satellite: A10, A10 S127, A10 S128, A10 S177, A10 S178, A15 S127, A15 S157, M30, M45-S265, M45-S269, M45-S355, M45-S355, M55-S135, M55-S325, M55-S329, R15-S822, R15-S829, S100 – S1133 Satellite: A75-S1253, A85-S107, M35X-S114, M65-S9062 Satellite: L25-S1192, L25-S1194, M45-S169, M65-S809, M65-S9092 Satellite Pro: 6100 1.8 GHz, 6100 2.2 GHz, M10 S405, M10 S406, M15 Series Tecra: A5-S516, M1, M3, M4, S1	15	D
		19	A
		19	B
		15	D

		*APC # 
LG	VX: VX10, VX2000	CUSBLG3
Motorola	A630, A780, C331(TDMA), C332(TDMA), C333(TDMA), C353(TDMA) i30, i35, i50, i55, i58, i60, i80, i85, i90, i95, T720, T721, T722, T730, T731, Talkabout 180, Timeport™250, Timeport™270, Timeport™280, V60i, V60c, V60p(PTT), V60t color, V60g, V60x, V200 Personal Communicator, V400, V551, V600, V620, V710	CUSBMT2
	i305, i530, i730, V3 RAZR, V3m, V3c, V3i, V3r, V3t, V3xx, KRZR K1, KRZR K1m, W315, MOTOQ, SLVR L7, SLVR L7c, SLVR L6, SLVR L2, V195, V235, PEBL U6, Nextel ic502, V190, V360, V365, V325, V323	CUSBMT5
	C331(GSM), C332(GSM), C333(GSM), C350, C650, T182, T193, T193M, Talkabout T2260, T2282, T2290, T2297, Timeport L7082, L7089, V-Series V180, V220, V2260, V2267, V2282, V2290, V2297, V2397	CUSBMT6
Nokia	1100, 1221, 1260, 1261, 2260, 2270, 2285, 2300, 33100, 3200, 3205, 3285, 3300, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3560, 3570, 3585, 3585i, 3586i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 6010, 6100, 6200, 6220, 6225, 6230, 6310, 6310i, 6340, 6340i, 6360, 6370, 6385, 6510, 6560, 6590, 6590i, 6600, 6610, 6620, 6650, 6800, 6810, 6820, 7200, 7210, 7250, 7250i, 7600, 7610, 7650, 7700, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8810, 8850, 8860, 8890, 8910, 8910i, 9210i, 9290, n-Gage	CUSBNK3
Panasonic	GD52, GD53, GD92, GD93	CUSBNK4
Samsung	A460, A500	CUSBSS3
	A310, E105, E316, E317, N150, N300, N625, P107, R225, S307, V205, V206, X105, X427	CUSBSS4
Siemens	A56, C56, CT56, M56, S56, SL56, SX1	CUSBSE3
Sony Ericsson	A2218z, A2618s, A2618sc, A2628, A2638, P800, P900 R190, R300, R310s, R310sc, R320s, R320sc, R380, R520 R600, R3001, T20, T28, T29, T39, T60, T61, T65, T66, T68, T200, T300, T306, T600, T601x, T608, T637, Z200, Z600	CUSBER1

		*APC # 
Handspring	Visor Prism, Visor Platinum Treo 90, 180, 270, 300	HUSBHS1 HUSBHS2
HP/Compaq iPAQ	1700, 1900, 2200, 3000, 3900, 4100, 4300, 4700, 5400, 5500 Series 3100, 3600, 3700 Series	HUSBCQ1 HUSBCQ2
Palm®	i705, M130, M500, M505, M515, Tungsten C, Tungsten T, Tungsten T2, Tungsten T3, Tungsten W, Zire 71	HUSBPM1
Sony	Clie Peg-N Series Peg-NR, Peg-SJ, Peg-SL, Clie Peg-T, Clie Peg-TG	HUSBSY1 HUSBSY2
Toshiba	e310, e740	HUSBTS1

* Charging a mobile phone or handheld requires a USB charging cable, which is sold separately.
NOTE: Other USB chargers will work with the Universal Power Adapter.

* La charge d'un cellulaire ou d'un ordinateur de poche requiert un câble de charge USB (vendu séparément).
REMARQUE : L'adaptateur Universal Power fonctionne avec les câbles de charge USB d'autres fabricants.

* Para cargar un teléfono móvil o un dispositivo de mano se requiere el uso de un cable de carga USB, el cual se vende por separado.
NOTA: El adaptador Universal Power puede también utilizarse con otros cables de carga USB.