



# **iPod / iPhone Tower Speaker**

**P16-41487**

## ***User's Manual***

***All brand names and trademarks are properties of their  
respective owners.***



## Getting Started

Remove the speaker from the box and remove any packaging material from the product.

## In the Box

- Speaker unit
- Stand and screws to attach the unit
- Remote control
- Instruction manual
- AC adapter
- Power cable

## Safety Instructions

When using electrical devices, basic safety precautions should always be followed. This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the device by a person responsible for their safety. Ensure the device is not too close to heat emitting sources or placed in direct sunlight. Check that the voltage indicated on the label corresponds with that of the local power infrastructure before connecting the device to the power supply. Do not leave the device unattended while connected to the main power supply. Do not immerse the device in water or any other liquids. It is imperative to unplug the power cord after the device has been used, before it is cleaned and while being repaired. Close supervision is required when using this device near children. Never leave the device within reach of children. Repairs to electrical devices should only be performed by qualified personnel. Improper repairs may place the user at serious risk.

This device is intended for household use only and should not be used for industrial or commercial purposes. Do not operate this device with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way. Do not use this device for anything other than its intended use. This device must be placed on a stable, heat resistant surface. Do not push objects into any openings as damage to the device and/or electric shock may occur. Do not use this product in wet or bad weather conditions. This product is not a toy. Do not play music at excessive levels especially near children.

## **Remote Control Battery Safety**


Ensure the battery compartments are secure. Only use the batteries recommended. Ensure correct fit of batteries, observing the plus and minus marks on both the battery and compartment. Replace a full set of batteries at one time. Store unused batteries in their packaging and keep away from metal objects that may cause a short circuit. Remove dead batteries from devices that will not be used again for a long time. Supervise children with batteries at all times. Remember to keep batteries away from small children as they can easily be swallowed. Seek medical attention if batteries are swallowed.

Never Dispose of batteries in a fire or attempt to recharge non-rechargeable batteries.

# Port Diagrams


## Top Panel

- 1. iPhone / iPod Dock
- 2. Standby
- 3. Function
- 4. Previous Track
- 5. Next Track
- 6. Volume -
- 7. Play/Pause
- 8. Volume +

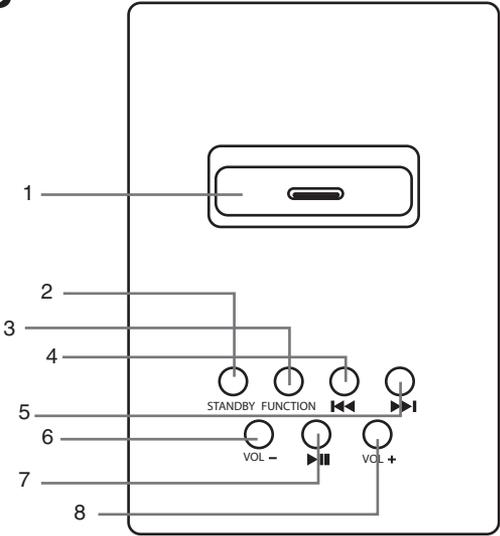


## Back Panel

- 1. Video Out
- 2. Left/Right Line In
- 3. 3.5mm Audio In
- 4. DC Jack

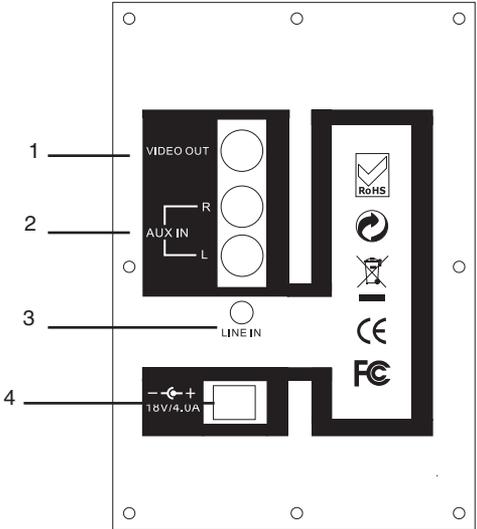

## Remote Control

1. Power
2. Sleep
3. Mute
4. iPod Menu
5. Menu Up
6. Source
7. Previous Track
8. Enter
9. Next Track
10. Memory and Time Set
11. Menu Down
12. Pause/Play
13. Treble +
14. Bass +
15. Volume +
16. Treble -
17. Bass -
18. Volume -

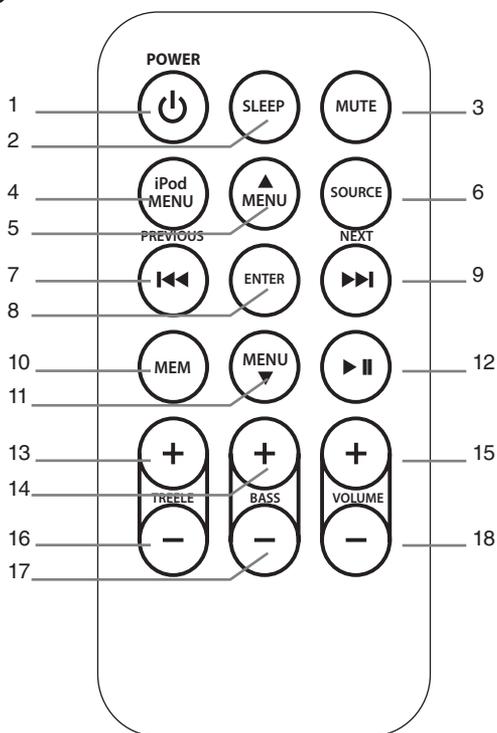


## Installing & Replacing the Remote Control Battery

When using the remote for the first time, pull out the clear tab from the battery compartment on the bottom of the remote. If your remote becomes intermittent or you find you have to move nearer the unit to operate the device, the battery likely needs to be replaced. To replace the battery, slide the small tab at the base of the remote to the right and simultaneously pull out the battery holder. Remove the battery and replace with a 3 volt Lithium CR2015 battery ensuring the +side is on the underside of the holder as you slide it back into the compartment.

## Setting up Your Tower Speaker

### Attaching the Base

1. Carefully take the tower body and base out of the packaging.
2. Locate and set aside the screws and washers.
3. Attach the base to the body aligning the three holes in the base with three holes on the tower.
4. Screw the base into the body.
5. Stand the tower upright on the floor. The device is now ready for use.

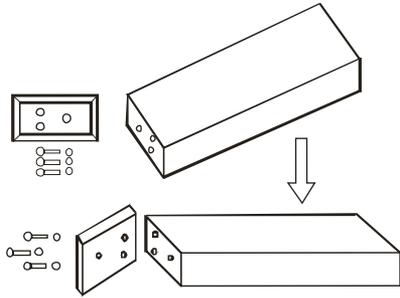

## Powering Up

Place the unit in the desired position and unravel the main power cable. Insert the cable into the power supply, connect the power supply to the wall and ensure the power switch on the back of the device is in the ON position.

## Time Setup

After the unit is plugged into the power supply for the first time or if there is a power failure, the LCD display read "0:00". In order to set the clock to the current time, the device needs to be in standby mode.

PM 12:00

1. Press MEM/TIME button, the digits on the display will blink intermittently.
2. Press the PREVIOUS/NEXT button repeatedly until the correct hour is set. Press the MEM/TIME to confirm.

3. The minute digits on the display will now blink. Repeat the above process until correct minute is set. Press the MEM/TIME to confirm the minute setting.
4. You can also connect your iPhone or iPod to the device and power it on, the display will automatically sync the time with the iPhone or iPod.

### Setting Alarm

1. Press and hold MEN/TIME button in shutdown state, the display will flash ON/OFF to select setting alarm or canceling alarm.
2. Press PREVIOUS /NEXT to select ON, and the display will blink. Press PREVIOUS/NEXT button repeatedly to set hour. Press MEM/TIME to confirm, then press PREVIOUS/NEXT to set minute.
3. Press MEM/TIME to confirm, then press PREVIOUS/NEXT to select iPod/Aux in status. Press MEM/TIME to confirm.
4. When no iPod is connected, the unit will charge to Aux in alarm automatically.
5. The volume would turn up from zero to 25 gradually.

### Charging your iPhone/iPod

You can charge your iPhone/iPod via the dock in either stand by or operation mode.

Your iPhone/iPod will automatically charge when docked. Ensure that the main power switch at the rear of the unit is in the ON position.

**iPod**

### Video Output from iPhone/iPod

1. Connect the device to your television using a composite video output cable.
2. On your iPhone/iPod, navigate to VIDEOS VIDEO SETTINGS
3. Dock the iPhone/iPod on the unit to begin playing a video from the docked iPhone/iPod.

## **Sleep Mode**

Press the SLEEP button, the display will then blink intermittently. Continue to press the button until the display shows the time you would like to set. It is possible to set from 10 to 90 minutes.

The display will blink three times to confirm the sleep setting, and then return to the interface. If you want to cancel the sleep mode, press the SLEEP button until 00 is read on the display. After it blinks three times, the sleep mode will be cancelled.

## **Playing Music on your iPhone or iPod**

1. Ensure the power switch on the rear of the speaker is ON.
2. Press and hold the function button until the red light below the iPhone/iPod dock illuminates.
3. Dock your iPhone or iPod to the device.
4. Press the play/pause button on the unit or on the remote control to begin playing music from the docked iPhone or iPod.

## **Using the Line-In or AUX Input**

Analogue sound signals from other sources can input to the speaker. Press the AUX button on the tower or repeatedly press the source button on the remote control until the display reads AUX or LIN.

## Line-In Jack

Requires a 3.5mm cable (not included).

1. Connect the 3.5mm cable to the Aux in jack. Connect the other end of the 3.5mm cable to any available audio source.
2. Press the power button to turn the device on.
3. Press the function button or source button on the remote to switch to Line-In mode labeled “L IN”.
4. Use the controls on the connected device to begin playing audio.

L in

## AUX-In Auxiliary Input RCA

Requires an RCA cable (not included).

1. Connect the RCA cable to the Auxiliary Input of the device. Connect the other end of the RCA cable to the audio output on your DVD player, stereo system, gaming system, television or any other device.
2. Press the power button to turn the device on.
3. Press the function button or the SOURCE button on the remote control to switch to Aux In 2 mode “AUX”.
4. Use the controls on the connected device to begin playing audio.

Aux

## Care and Maintenance

- It is recommended to unplug the device when not in use.
- Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.
- Do not use this unit in wet or damp conditions.
- Always disconnect the unit from the mains power supply before cleaning. Clean the appliance with a soft, damp, lint free cloth. Do not use abrasives or harsh cleaners.

MADE IN CHINA



Proximus Products  
8300 West Flager St.  
Suite# 121-106  
Miami, FL 33144

Technical Support:  
1(888) 222-5487