

CAMERA WATCH

USER'S MANUAL



OPERATION INTRODUCTION

Parts Description:

- 1. LED Description: A status indicator light is on the face of the watch to indicate standby, recording, and photo.
- 2. Button description: The **video/power button** is used for powering on, shutdown, and video recording mode. The **camera/mode button** is used to capture a photo and audio recording.
- 3. Socket Description: The **USB socket** is used for connecting to computer or charger, data transfer, charging, and power supply port. Unscrew the cap to reveal **USB socket** and

connect.

- **4.** Microphone and Camera: The **microphone** is used to pick up sound signals for video or audio recording; the **camera** is used to pick up video and photos.
- **5.** Timing adjust: The **time adjust dial** is used to adjust the time of watch. To adjust time, pull the **time adjust dial** out, turn the dial until it is set on the desired time, and push back in.

Operating instructions: Please read before operating

- Recommendation: please connect the data cable to watch first, then connect to the computer.
- This product is made of precision electronic components, when operating please do not touch strongly in order to prevent damage to keys, if cannot read disk, please take the USB plug out a little, red and blue lighting when connected to the computer.
- Power On/Off: To power on, press and hold the **power/video button** for about 2 seconds to power on, the LED indicator will turn on red and blue indicating it is powering on, then the light will turn and stay blue, indicating it is now in standby mode. To power off, press and hold the **power/video button** for about two seconds, the light will blink red two times quickly then shutdown.
- Video Operation: While in standby mode, press the **power/video button** once, the blue light blinks, turns off and starts recording video, blue flashing while videoing , video , Press the **power/video button** once again to stop recording and the video recording will be automatically be saved. The watch will return to standby mode with the blue standby light.
- Camera Operation: While the watch is in standby mode, press **camera button** once; the blue standby light will blink red once indicating it is capturing a picture, then it will return to standby mode.
- Voice Recording: While the watch is in standby mode, press and hold the **camera button**, the blue standby blink red three times slowly, then turn off, indicating it is in voice recording mode. To exit voice recording, press and hold **camera/mode button**, the blue light will turn back on indicating it has returned to standby mode.
- Charging the Battery: To charge the battery, use the provided USB cable to connect the watch to a USB outlet using the **USB socket**.
- Removable Disk: While the watch is powered off or standby mode, it can be connected to a computer with the USB cable. It will appear in the computer as a removable disk. To disconnect, right-click on the removable disk drive and select “eject” to safely disconnect the watch. If the watch is just pulled out without ejecting, you risk files being lost or damage, as well as damage to the hardware.
- Set Recording Time: The camera provides the recording time in video and photo which is displayed in the format: year–month–day, hour:minutes:seconds. To set the date/time, connect the watch to a computer using the USB cable well, in the computer it will appear as a “removable disk” drive. Create a new text document (*.txt format). Type, year.month.date hour:minute:seconds, with the actual date and time, in the text document. Name the file “time.txt” and save the file in the root directory of the “removable disk” drive, then disconnect the watch and reboot it. Videos and photos should now display the correct time and date.
- Exception Handling: If there is insufficient storage space in the memory, the LED indicator will

flash a blue and red light for about five seconds, it will automatically save any current file and shut down. If you wish to continue to use the watch, please connect it to a computer, back up the files onto the computer, and delete the files off the watch memory to create more space for new files. If the battery runs out while in use, the LED indicator will flash a blue and red light for about five seconds, it will automatically save any current file and shut down. Please connect the watch to charge the battery if this happens.

- If the watch is not responding for any other reason, it can be reset by holding down the **power/video button** and the **camera/mode button** at the same time.

Item	parameter
Video form	AVI
Video coding	M-JPEG
Resolution	1920 * 1080

- Parameter
 - Notice
 - Work Place: It is only for place.
 - Battery: You need to charge it if it does not work for long time.
 - File safety: It is not a professional memory card, so it cannot instead of professional memory card completely.you need to keep back-up.
 - Video quality: It is not the professional video equipment, so it will not have professional video quality.
 - Working temperature: 0-45°C, it is better to use in room temperature.
 - Working humidity: 20%-80%, do not put it into water or humid place.
 - Luminance: Please to use it in a luminous area.
 - Cleanliness: It is better not to use it in a dusty area.
 - Other Items: It cannot be used in high magnetic fields, or uniform electric field. It cannot be stroked, quickly, or hard.
 - Notice: Please contact the local sellers if you need any more information or help.

Player software	Operating systems or mainstream movie playback software
Picture format	JPG
Image scaling	4 : 3
Support system	Windows me / 2000 / xp / 2003 / vista
	Mac os 10.4 ; Linux ;
VOL	DC – 5V
Interface – type	Mini USB
Memory card format	Nand flash
Battery	High – capacity polymer lithium battery