

Camcorders

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

* MP3450i requires PA-L34 (not included in original package) to use UA-xxx adapter tips *

Canon

Model	MP1550	MP1600	MP1800	MP3300	MP3450	MP3450i	MP3700	MP3750
DC22, DC40, DC50	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
DC100, DC210, DC220, DC230, DC310, DC320, DC330	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
Elura 40MC, Elura 50	n/a	n/a	n/a	PA-L30	PA-L30	PA-L30	n/a	n/a
Elura 80, Elura 85, Elura 90, Elura 100	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
EOS 5D	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
HF10, HG10, HR10, HV10, HV20, HV30	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
Optura 10, Optura 20, Optura 50, Optura 60, Optura 400, Optura 500, Optura Xi	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
ZR60, ZR65MC, ZR70MC	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a
ZR100, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700	n/a	n/a	n/a	PA-L34	PA-L34	PA-L34	n/a	n/a

JVC

Model	MP1550	MP1600	MP1800	MP3300	MP3450	MP3450i	MP3700	MP3750
GR-AX890US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-AXM18	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-D32U, GR-D33US, GR-D71US, GR-D72US, GR-D73US, GR-D74US, GR-D93US, GR-D94US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-D230US, GR-D275US, GR-D290US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-D750, GR-D770, GR-D796, GR-D850	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-DA30US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-DX77US, GR-DX97US, GR-DX307US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-DZ7US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-SXM38, GR-SXM161US, GR-SXM260US, GR-SXM265US	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GR-HD3, GR-HD5, GR-HD6, GR-HD7	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GZ-MG330A, GZ-MG330H, GZ-MG330R, GZ-MG335H, GZ-MG360B, GZ-MG365B	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a
GZ-MG730	n/a	n/a	n/a	UA-JVC01	UA-JVC01	UA-JVC01	n/a	n/a

Panasonic

Model	MP1550	MP1600	MP1800	MP3300	MP3450	MP3450i	MP3700	MP3750
PV-GS320	n/a	n/a	n/a	PA-L40	PA-L40	PA-L40	n/a	n/a
SDR-H18	n/a	n/a	n/a	PA-L40	PA-L40	PA-L40	n/a	n/a
SDR-S10P1	UA-L40	UA-L40	UA-L40	PA-L40	PA-L40	PA-L40	UA-L40	UA-L40

Samsung

Model	MP1550	MP1600	MP1800	MP3300	MP3450	MP3450i	MP3700	MP3750
SC-D23, SC-D24, SC-D27, SC-D29, SC-D33, SC-D80, SC-D86	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-D101, SC-D103, SC-D105, SC-D107, SC-D130, SC-D163, SC-D164, SC-D180	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-D230, SC-D263	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-D303, SC-D305, SC-D351, SC-D353, SC-D363, SC-D364, SC-D365, SC-D372	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-D453, SC-D564, SC-D590	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-D901, SC-D903, SC-D906, SC-D963	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-D5000, SC-D6040, SC-D6550	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-DC575, SC-DC173U	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-HMX10C	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a
SC-MX10, SC-MX10P, SC-MX10R	n/a	n/a	n/a	UA-SAM6	UA-SAM6	UA-SAM6	n/a	n/a

Sony								
Model	MP1550	MP1600	MP1800	MP3300	MP3450	MP3450i	MP3700	MP3750
CCD-TR76	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
CCD-TR516, CCD-TR716, CCD-TR818, CCD-TR910	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
CCD-TRV36, CCD-TRV41, CCD-TRV43, CCD-TRV46, CCD-TRV51, CCD-TRV57, CCD-TRV58	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
CCD-TRV66, CCD-TRV67, CCD-TRV68, CCD-TRV81, CCD-TRV87, CCD-TRV88, CCD-TRV98	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
CCD-TRV108, CCD-TRV118, CCD-TRV128, CCD-TRV138	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
CCD-TRV308, CCD-TRV318, CCD-TRV328, CCD-TRV338, CCD-TRV608	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-DVD7, DCR-DVD92, DCR-DVD103, DCR-DVD105, DCR-DVD108, DCR-DVD203, DCR-DVD203KIT1, DCR-DVD205	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-DVD100, DCR-DVD101, DCR-DVD200, DCR-DVD201, DCR-DVD300, DCR-DVD301	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-DVD305, DCR-DVD308, DCR-DVD403, DCR-DVD405, DCR-DVD408, DCR-DVD505, DCR-DVD508, DCR-DVD610, DCR-DVD710, DCR-DVD810, DCR-DVD910	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-HC20, DCR-HC21, DCR-HC26, DCR-HC28, DCR-HC30, DCR-HC32, DCR-HC36, DCR-HC38	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-HC40, DCR-HC42, DCR-HC46, DCR-HC48, DCR-HC52, DCR-HC62, DCR-HC65, DCR-HC85, DCR-HC90	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-HC1000	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-IP1, DCR-IP5, DCR-IP7BT, DCR-IP55, DCR-PC55/W, DCR-IP220	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-PC9	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-PC55/B, DCR-PC109, DCR-PC350, DCR-PC1000	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-PC100, DCR-PC101, DCR-PC105, DCR-PC110, DCR-PC115, DCR-PC120BT, DCR-PC330	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-SR40, DCR-SR42, DCR-SR42A, DCR-SR45, DCR-SR60, DCR-SR62, DCR-SR65	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-SR80, DCR-SR82, DCR-SR82C, DCR-SR85, DCR-SR100, DCR-SR200, DCR-SR200C, DCR-SR220, DCR-SR220D, DCR-SR300, DCR-SR300C	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
DCR-TR7000	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV6, DCR-TRV8, DCR-TRV10, DCR-TRV11, DCR-TRV17, DCR-TRV18, DCR-TRV19, DCR-TRV20, DCR-TRV22, DCR-TRV25	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV27, DCR-TRV30, DCR-TRV33, DCR-TRV38, DCR-TRV39, DCR-TRV50, DCR-TRV70, DCR-TRV80	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV110, DCR-TRV120, DCR-TRV130, DCR-TRV140, DCR-TRV210, DCR-TRV230, DCR-TRV240, DCR-TRV250, DCR-TRV260, DCR-TRV280	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV310, DCR-TRV315, DCR-TRV320, DCR-TRV330, DCR-TRV340, DCR-TRV350, DCR-TRV360, DCR-TRV460, DCR-TRV480	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV510, DCR-TRV520, DCR-TRV525, DCR-TRV530	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV720, DCR-TRV730, DCR-TRV740, DCR-TRV820, DCR-TRV830, DCR-TRV840	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-TRV900, DCR-TRV950	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
DCR-VX2000, DCR-VX2100	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
HDR-CX7	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
HDR-FX1, HDR-FX7	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
HDR-HC1	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
HDR-HC3, HDR-HC5, HDR-HC7, HDR-HC9	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
HDR-SR1	n/a	n/a	n/a	UA-SONY2	UA-SONY2	UA-SONY2	n/a	n/a
HDR-SR5, HDR-SR7, HDR-SR8, HDR-SR10, HDR-SR10D, HDR-SR11, HDR-SR12	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
HDR-UX5, HDR-UX7, HDR-UX10, HDR-UX20	n/a	n/a	n/a	UA-SONY4	UA-SONY4	UA-SONY4	n/a	n/a
NSC-GC1	UA-L40	UA-L40	UA-L40	PA-L40	PA-L40	PA-L40	UA-L40	UA-L40

